

TheMagicTouch[®] WOW - Light

with Hot Stamp Foil



Instruction Sheet

PRINT

- Software** Open your design
- Media selection** TheMagicTouch WOW - Light Hot Stamp Foil
- Print** Print face up
Do not mirror image

PRE-HEAT

- Application** Place theMagicTouch T-Pad smooth side up
- Temperature** 145 °C
- Time** 10 seconds
- Pressure** High Pressure
- Press** To heat up the lower platen and TheMagicTouch T-Pad

STEP 1

- Application** (1) TheMagicTouch T-Pad must be warm
(2) Place yellow sheet (TSheet) face up
(3) Place your magenta sheet (MSheet) with printed side face down on top of yellow sheet (TSheet)
(4) Cover with TheMagicTouch Release Paper
- Temperature** 145 °C
- Time** A4: 60 seconds | A3: 90 seconds
- Pressure** High Pressure
- Press** To apply the transfer to the yellow sheet (TSheet)
- Transfer removal** Leave TheMagicTouch Release Paper on magenta sheet (MSheet)
Immediately peel magenta sheet (MSheet) in a smooth, flat, constant movement

STEP 2

- Application** Place your garment on the Heat Press
Place yellow sheet (TSheet) face down
Cover with TheMagicTouch Release Paper
- Temperature** 145 °C
- Time** 3 seconds
- Pressure** High Pressure
- Press** To apply the transfer on the fabric
- Transfer removal** Cold Peel

STEP 3




- Application** Cover print with Hot Stamp Foil
- Temperature** 145 °C
- Time** 15 seconds
- Pressure** High Pressure
- Press** To apply the Hot Stamp Foil on the design
- Transfer removal** Cold Peel

STEP 4

- Application** Cover Print with TheMagicTouch T-Seal face down
- Temperature** 145 °C
- Time** 20 seconds
- Pressure** High Pressure
- Press** To seal transfer into the fibers of the fabric
- Transfer removal** Cold Peel

NOTES:

- Only use with white toner printers. Local set-up can have an effect on time and temperature settings and end results.
- We highly recommend that before every usage of production runs, a test should be conducted on the specific fabric.
- Keep stored dry and at room temperature.
- First wash after 48 hours only, washing up to 40°C, do not use fabric softener/liquid detergent, or a high RPM. Do not tumble dry.

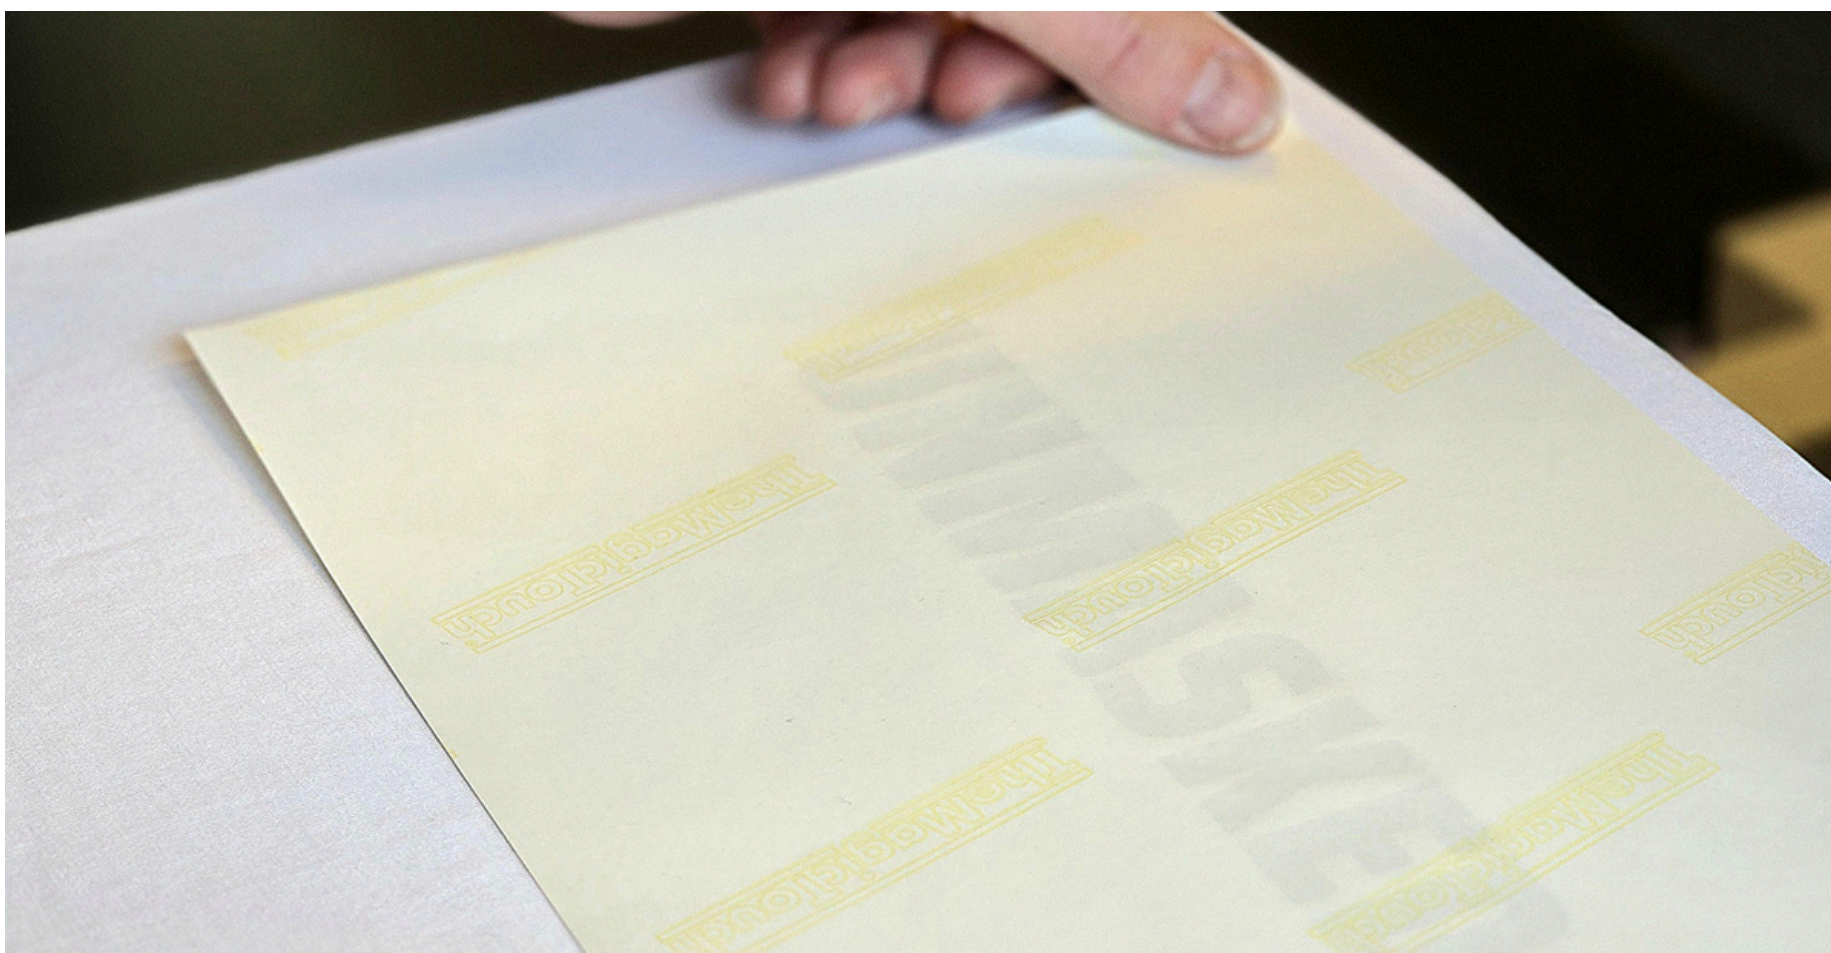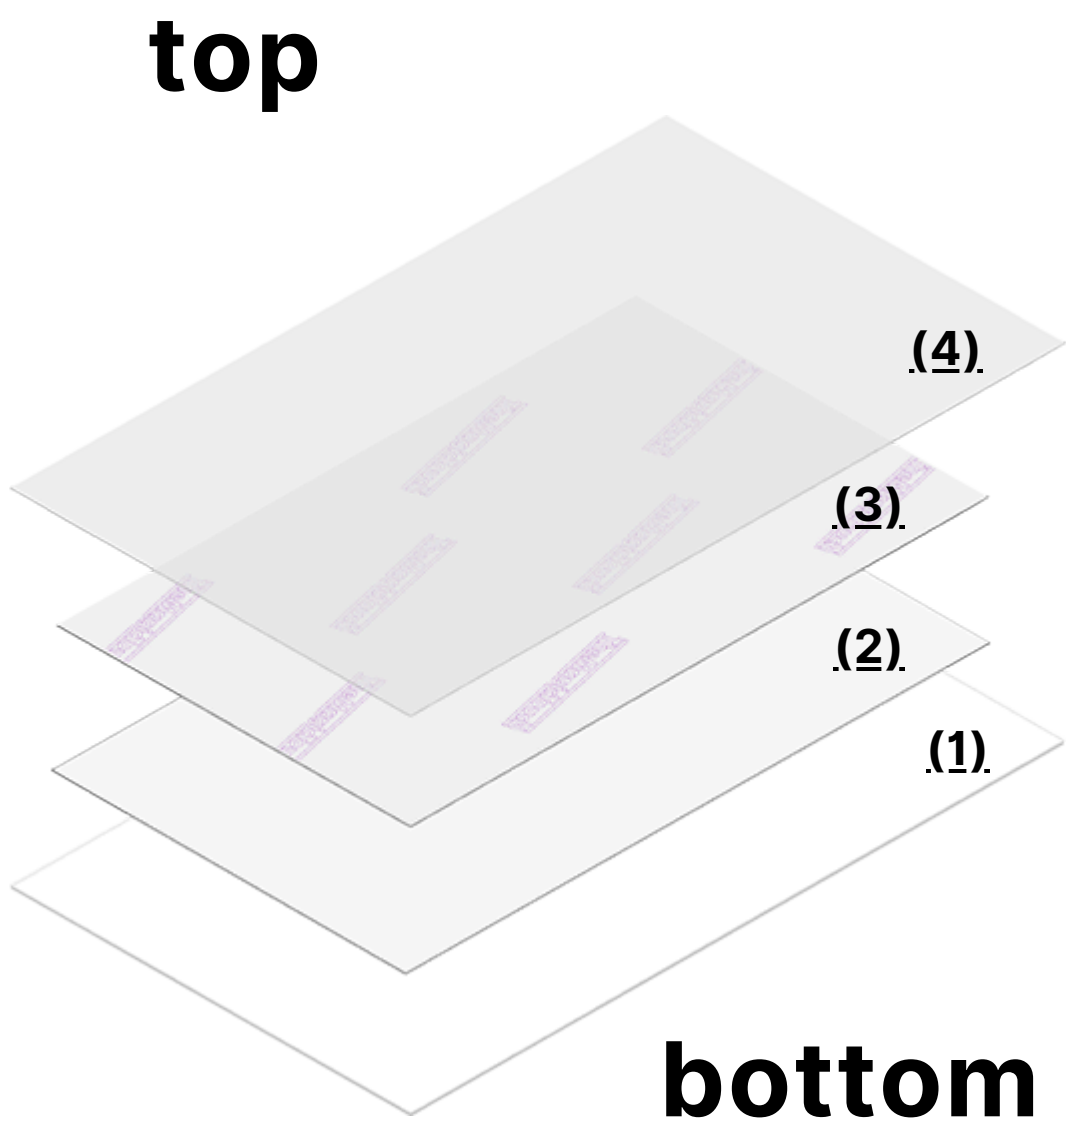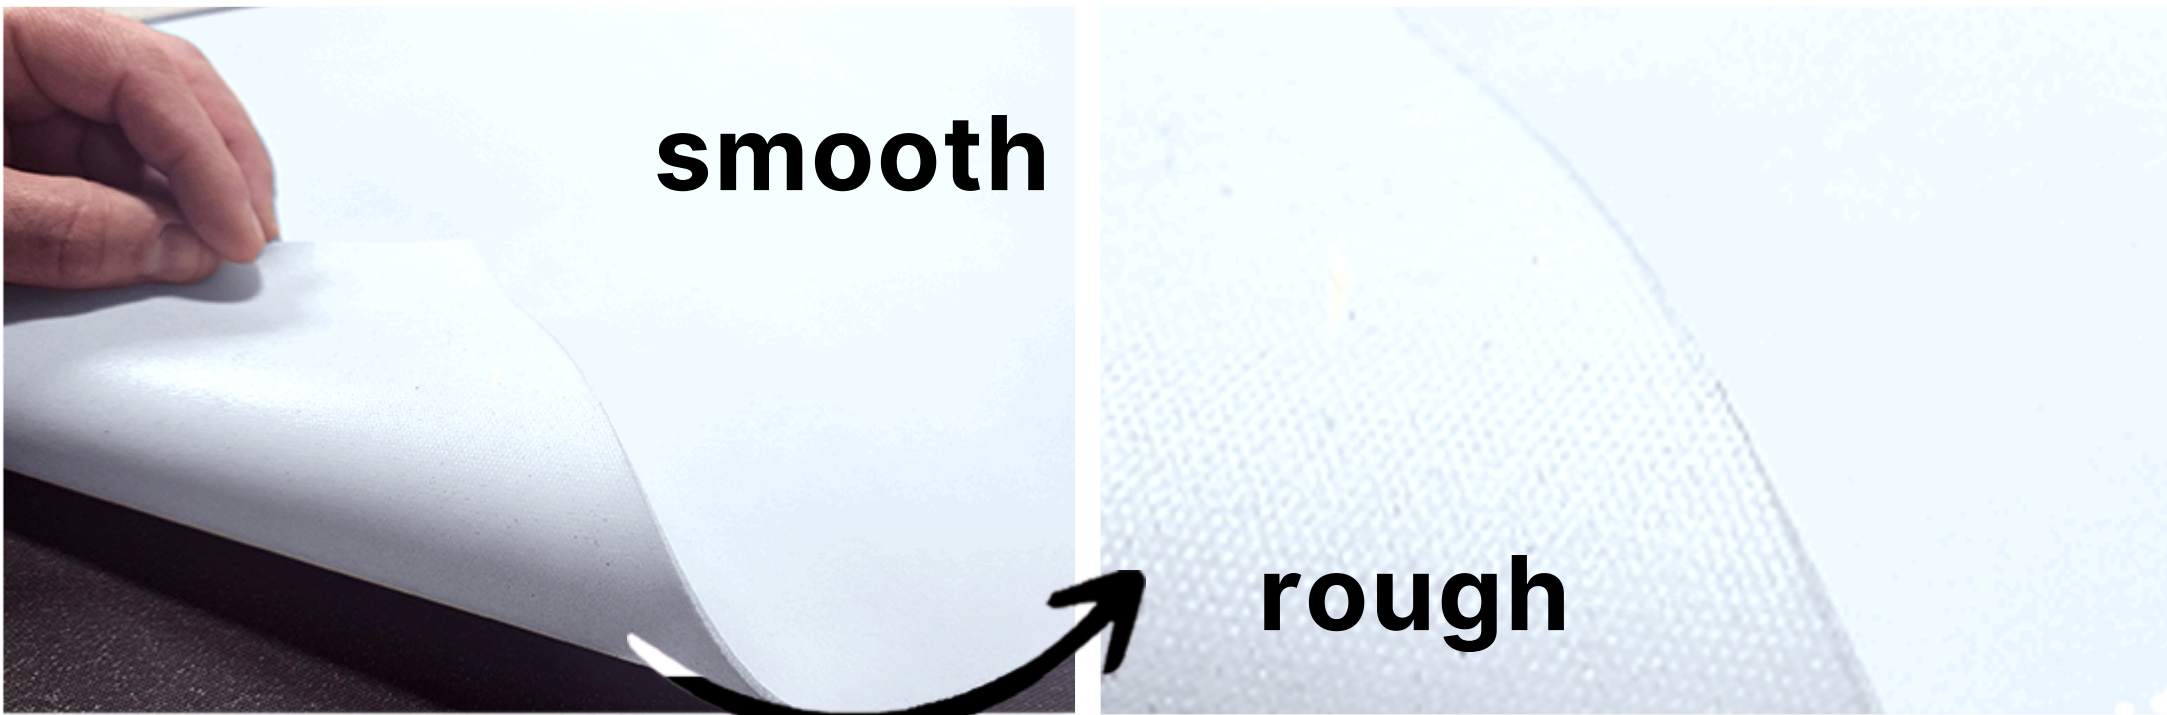

Hot Stamp Foil



TheMagicTouch
SOFTWARE PRO



WOW